


WIRED NURSE CALL SYSTEM

BEDSIDE CALL UNIT

Bedside call unit has two buttons with two different colors for assistance calls (red), and for staff presence and reset (green). When a resident presses on the red button, it will send visual and audible alert signals to the local panel, warning lamp and nurse central desk. When staff presence they press the green button and once they finish up with the resident they press on the green button again to reset the bedside call unit.

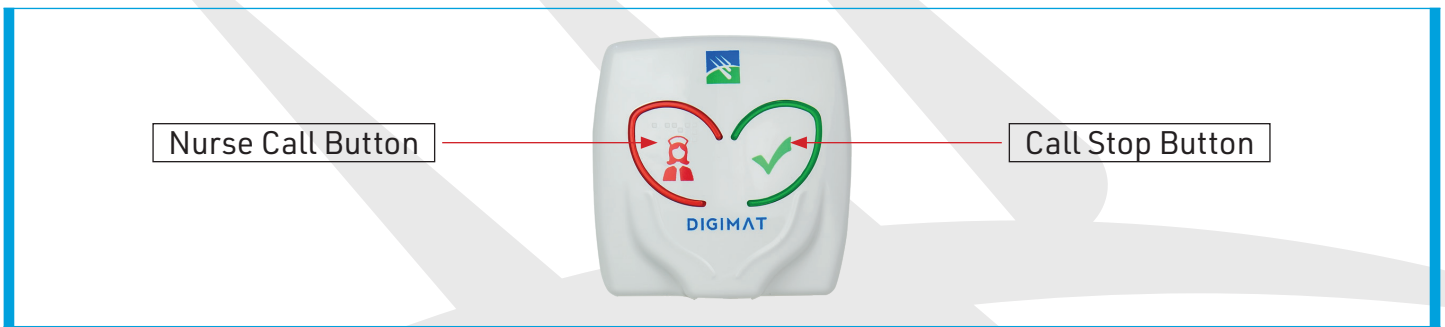

TECHNICAL SPECIFICATIONS:

Weight	70 gr
Width	84 mm
Height	84 mm
Depth	33 mm
Operating Temperature	-10°C / +50°C
Operating Humidity	%30 / %80 RH
Material	ABS, Plastic
Color	White
Power Supply	12V 5A
Power (Watt)	0.26 W
Processor	Microcontroller
Communication	RS-485
Buzzer Speaker	Yes
Input Port Type	RJ-45
Output Port Type	RJ-11

